 


TIMEX®

Model T123 **Alarm Clock**

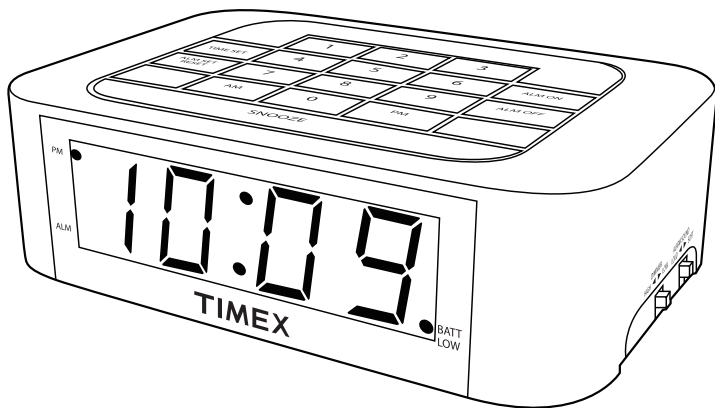

For additional information, online registration,
and exclusive special offers visit our website:

www.timexaudio.com

For questions or comments regarding this or other products,
please call our toll-free number 1-800-888-4491.

Para instrucciones en Español, llame al 1-800-888-4491.



CAUTION
RISK OF ELECTRIC SHOCK.
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user of the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The symbols above are located at the bottom of the cabinet.

CAUTION: To prevent electric shock, do not use this (Polarized) plug with an extension cord receptacle, or other outlets unless the blades can be fully inserted to prevent blade exposure.

ATTENTION: Pour prévenir les chocs électriques ne pas utiliser cette fiche polarisée avec un prolongateur. Une prise de courant, ou une autre sortie de courant sauf si les lames peuvent être insérées à fond sans en laisser aucune partie à découvert.

A Consumer Guide to Product Safety

IMPORTANT SAFETY INSTRUCTIONS

This unit has been designed and manufactured to assure your personal safety. Improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use. Keep these instructions handy for future reference. Take special note, and adhere to all warnings on the unit and in the instruction and service manual.

1. **Water and Moisture** - The unit should not be used near water. For example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.
2. **Ventilation** - The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as bookcase or cabinet that may impede the flow of air through the ventilation openings.
3. **Heat** - The unit should be situated away from heat source such as radiators, heat register, stoves, or other appliances (including amplifiers) that produce heat.
4. **Power Sources** - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Grounding or Polarization** - This product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
6. **Power Cord Protection** - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Paying particular attention to cords at plugs, convenience receptacles, and the points where they exit from the unit.
7. **Cleaning** - The unit should be cleaned only as recommended by the manufacturer.
8. **Nonuse Periods** - The power cord of the unit should be unplugged from the outlet when it is to be left unused for a long period of time.
9. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
10. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - A. The power-supply cord or plug has been damaged.
 - B. Objects have fallen into or liquid has been spilled into the enclosure.
 - C. The unit has been exposed to rain.
 - D. The unit has been dropped or the enclosure damaged.
 - E. The unit does not appear to operate normally or exhibits a marked change in performance.
11. **Servicing** - The user should not attempt to service the unit beyond that described in the user's operating instructions. All other servicing should be referred to qualified service personnel.

FCC Information

 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Controls and Indicators

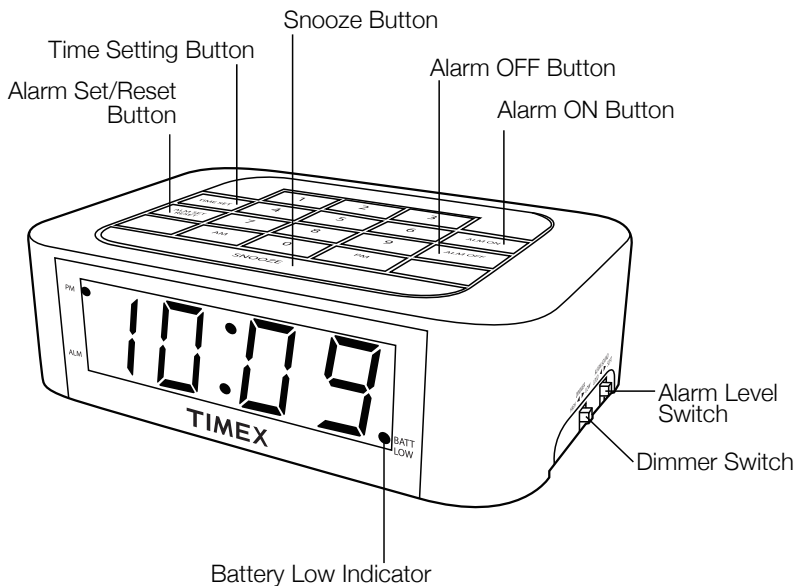

Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- ☐ Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzene, thinner or similar materials can mar the surface of the case.

Battery Installation

 
Note: After installing the Battery Backup and reading through the Maintenance, plug the AC line cord correctly into a wall outlet.

Battery Backup

If the Backup Battery has been installed and a power failure occurs or the AC cord is accidentally disconnected, the display will not remain lit, but the current time and alarm time settings will be temporarily maintained.

If the Backup Batteries has not been installed or is dead, when the AC power resumes the display will flash and you must reset the time and alarm settings.

1. Open the battery compartment cover.
2. Insert two “AAA” batteries, checking the + and – ends of the batteries. We recommend do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

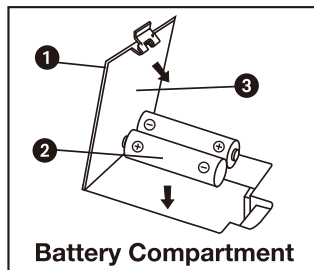

Note: You should replace backup batteries when **Battery Low Icon** lights up.

3. Close the compartment cover.

Battery Low Indicator

The **Battery Low Indicator** is a dot located in the lower right corner of the display. When the dot flashes it is time to replace backup batteries.

Setting Clock Time and Alarm Time

Setting Clock Time

1. Press and hold the **Time Set Button** until the display shows “: 0”.
2. Enter the current time then AM or PM. E.g, to set time to 6:45pm, just press “6”, “4”, “5” and then the “PM” button. A red dot will appear at the upper left of the display next to PM to indicate PM time setting; there is no AM indicator. You should hear 2 beep tones to indicate your setting is confirmed.
3. If time is input improperly, you will hear a long beep tone and the unit will revert to the “: 0” display. You must enter a valid time.

Setting Alarm Time

4. Press and hold the **Alarm Set/Reset Button** until the display shows “: 0”.
5. Enter the desired alarm time and end with AM or PM. E.g, to set alarm time to 7:15am, just press “7”, “1”, “5” and then the “AM” button. You should hear 2 beep tones to indicate your alarm time setting is confirmed.
6. If alarm time is input improperly, you will hear a long beep tone and the unit will revert to the “: 0” display. You must enter a valid time.

NOTE: The alarm is NOT automatically armed once set. See Step 2 below.

Alarm Operation

1. Set the alarm time as indicated in **Setting Alarm Time**.
2. Press and hold the **Alarm On Button** for about 2 seconds to turn on the alarm. A red **Alarm Indicator** will appear in the lower left corner of the display indicating the alarm function is on. The alarm is now set to turn on automatically at the set alarm time. To review the current alarm time, press the **Alarm On Button**. The set alarm time will be displayed for 5 seconds.
3. Move the **Alarm Sound Switch** to Loud or Soft for to wake to a louder or softer buzzer sound.
4. After the alarm goes off, press the **Alarm Set/Reset Button** to turn off alarm and reset it to come on again the next day at the same time.
5. To stop the alarm from coming on the following day, press and hold the **Alarm Off Button** for about 2 seconds to turn off the alarm. The **Alarm Icon** will disappear, too.
6. If the alarm is not turned off after it sounds, it will sound for approximately 1 hour then turn off. This cycle will repeat every 24 hours unless the controls are changed.

Snooze Operation

1. Press the **Snooze Button** after the alarm sounds, the alarm will be silenced and will come on again in 9 minutes. The Alarm Indicator will flash to show snooze mode is active. **You may repeat this cycle several times during the 1 hour alarm cycle.**

Dimmer Switch

1. Set the Dimmer Switch to HI or LO depending on the brightness in the room.

Limited 90-Day Warranty Information

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should service be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$3.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service after the warranty period or without proof of purchase is \$6.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack the unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of Soundesign, for the sum of \$3.00 (or \$6.00 if after the warranty period or without proof of purchase).
4. Send the unit prepaid to the Factory Service Center listed below:

Consumer Repair Department
SDI Technologies Inc.
Timex Audio Products Division
1330 Goodyear Dr.
El Paso, TX 79936-6420

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 90 days, and SDI Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

TIMEX is a registered trademark of Timex Corporation the United States and other countries.